

LEFT HAND SOUNDS

"They Make A Difference"



ALTER STYLE

ALTER STYLE provides a change to the selected Rhythm Style. Using Alter Style will add even more variety to your Rhythm Styles.

Parts of the Rhythm Style - WHAT YOU ARE HEARING

The Rhythm Styles bring many different types of bands or orchestras into your home to play along with you.

EACH RHYTHM STYLE IS MADE UP OF THREE ELEMENTS:

1. A BASS PLAYER
2. A DRUMMER
3. THE REST OF THE BAND

AUTO BASS

AUTO BASS is the Lowrey easy-play feature that plays the bass pedals for you.

DRUM VARIATION

DRUM VARIATION provides a different drum sound and/or pattern for each Rhythm Style.

GENIE & ORCH PLUS

The GENIE and ORCH PLUS buttons allow you to determine how much of the rest of the band you will hear when using a Rhythm Style. It will even change the Intro's, Ending's and FX (Fill-ins).

INTRO / ENDING

The INTRO/ENDING adds professional sounding introductions and endings to each Lowrey Rhythm Style.

FX (Effects)

Add special FX to your playing. The FX feature adds a professional sounding fill-in or "break" in the Rhythm Style.

RHYTHM PRESET

RHYTHM PRESET provides a complete registration (sounds, volumes, effects, etc.) on the upper keyboard for each Rhythm Style. Your General Presets become Rhythm Presets as well giving you up to 11 different set ups for each Rhythm Style.

MEMORY

MEMORY holds the last chord played on the lower keyboard after the key or keys have been released.

EASY

The EASY button turns all of the "Easy Play" features on and off by pressing just one button.

TRANSPOSE

At the touch of a button, TRANSPOSE moves the pitch (sound) on the organ up or down.